

TRANSPONDER

T-BT1315 HT "ORION"
HF – multi read



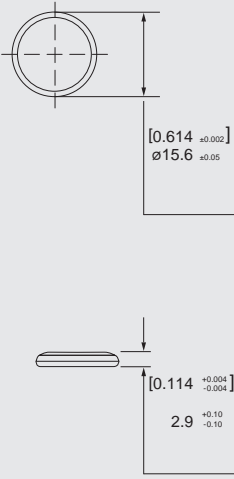
Customer benefits:

- Fully ISO 15693 / 18000-3 compatible LaundryChip™
- Developed to withstand the highest levels of water extractor presses
- Optimized shape reduces the risk of damages to textiles
- Multi-purpose transponder suitable for all types of linens, garments, mats and mops
- Robust LaundryChip™ lasts for up to 200 washing cycles



Product description:

With the T-BT1315 HT "ORION" tag, DATAMARS launches its 'next generation' LaundryChip™ for the textile service markets. Thanks to its new design and material, this tag can withstand the highest levels of water extractor pressures, typically used for flat linen products such as towels, sheets or table cloths. As hard tag with optimized shape, "ORION" reduces the risk of damage to textiles during the ironing process, making it ideal for the hospitality, healthcare and workwear segments.

Mechanical Drawing	Product qualification
	Patching 220°C (428°F), 20 seconds 1 cycle
	Washing 90°C (194°F), 15 minutes 200 cycles
	Water extractor up to 50 bars*
	Tumbler T input 185°C (365°F) T output 170°C (338°F) 3 minutes 200 cycles
	Tunnel finisher 180°C (356°F) 10 minutes 200 cycles

TECHNICAL DATA:

Weight:	~0.80g
Temperature:	Storage: -40°C – +120°C (-40°F – +248°F) Operating: see product qualification
Material:	PPS
Mechanical resistance:	up to 50 bars*
Chemicals:	All common chemicals in the washing process
Reading distance:	Up to 40 cm (15.7") (with A-ST1330)
Reading speed:	> 40 pcs/second with R-IN1300
Lifetime:	200 wash cycles or 3 years from shipping date (whichever comes first)
Power supply:	Passive, through antenna RF field
ISO:	ISO 15693 / ISO 18000-3
Ordering information:	T-BT1315 HT "ORION"

Subject to change without notice

* Results based on parameters used in our laundry tests.

DATAMARS, the inventor of the LaundryChip™, offers innovative RFID-based solutions which are the result of 20 years of industry experience that have enabled the company to establish itself as the global market leader in the textile identification market, with more than 700 clients in 24 countries and over 100 million RFID chips in use. DATARS RFID solutions are renowned for their accuracy and reliability by all equipment manufacturers serving the textile service industry.

These solutions can be tailored to specific customer requirements and are completed by attractive service & support offerings.

DATAMARS

Americas Headquarters:
8433 South Av. Bldg., 4-2
Youngstown, OH 44514 USA
Phone: +1 330 758 1240
Fax: +1 330 758 3805

Corporate Headquarters:
Via ai Prati
6930 Bedano-Lugano
Switzerland
Phone: +41 91 935 73 80
Fax: +41 91 945 03 30
textile-id@datamars.com
www.datamars.com

Asia Headquarters:
Northern Region Industrial Estate
179/1 Moo 4, T. Ban Klang, A. Muang
Lamphun, Thailand 51000
Phone: +66 53 582 021
Fax: +66 53 582 680